



# کاتالوگ جامع بلوتی

پاور استیشن های قابل حمل و پرتابل

مدل AC70P



## درباره کالاصنعتی



گروه کالاصنعتی با هدف تعریف چارچوبی حرفه‌ای و راهبردی برای پاسخ به نیازهای بنیادین صنایع، کارخانجات و واحدهای تولیدی کشور شکل گرفته است. کالاصنعتی امروز فراتر از یک ساختار فروشگاهی سنتی عمل می‌کند و به‌عنوان یک زنجیره‌ی تأمین یکپارچه و تخصصی B2B در صنعت ایران شناخته می‌شود؛ مجموعه‌ای که بر پایه‌ی پیوند میان ظرفیت‌های بازرگانی و نیازمندی‌های واقعی بدنه‌ی اجرایی صنعت بنا شده است

اصل بنیادین عرضه و سامان‌دهی تأمین منطق کاری کالاصنعتی بر این اصل استوار است که تجهیزات

و کالاهای سنگین صنعتی باید در کوتاه‌ترین زمان ممکن، با اصالت تضمین‌شده و به‌صورت مستقیم از سوی تولیدکنندگان و بازرگانان معتبر، به خطوط تولید کارخانجات کشور برسند. کالاصنعتی با اتکا به زیرساخت دیجیتال و زنجیره‌ی لجستیک تخصصی خود، نقشی محوری در این سامان‌دهی و مدیریت یکپارچه‌ی زنجیره‌ی تأمین بر عهده دارد؛ فرایندی که نتیجه‌ی مستقیم آن، ساده‌سازی خریدهای پیچیده‌ی صنعتی، کاهش توقف و خطا در تأمین، و در نهایت افزایش بهره‌وری صنایع کشور است

وجوه تمایز و ارزش‌های ما

راهکارهای مهندسی و مشاوره‌ی فنی جامع: ارزش واقعی تأمین تجهیزات صنعتی، فراتر از تحویل صرف کالا، در ارائه‌ی مشاوره‌ی دقیق فنی-مهندسی و متناسب با شرایط خطوط تولید نهفته است. کارشناسان متخصص ما با ارائه‌ی دیتاشیت و نقد و بررسی فنی، خریدی آگاهانه و پایدار را برای مدیران فنی و تدارکاتی رقم می‌زنند؛ چرا که آموزش و اطلاع‌رسانی درست را بخشی جدایی‌ناپذیر از تأمین مسئولانه می‌دانیم

تأمین مسئولانه و روابط پایدار: همکاری مستمر با صنایع بزرگ فولاد، سیمان، پتروشیمی و مجموعه‌های دستگاه‌سازی سراسر کشور، حاصل تعهد ما به تأمین مسئولانه، تضمین اصالت و پایش دقیق کالا تا لحظه‌ی تحویل به خط تولید است

## سبد جامع محصولات و دیپارتمان‌های تخصصی کالاصنعتی

گروه کالاصنعتی با هدف تعریف چارچوبی حرفه‌ای و راهبردی برای پاسخ به نیازهای بنیادین صنایع، کارخانجات و واحدهای تولیدی کشور شکل گرفته است. کالاصنعتی امروز فراتر از یک ساختار فروشگاهی سنتی عمل می‌کند و به‌عنوان یک زنجیره‌ی تأمین یکپارچه و تخصصی B2B در صنعت ایران شناخته می‌شود؛ مجموعه‌ای که بر پایه‌ی پیوند میان ظرفیت‌های بازرگانی و نیازمندی‌های واقعی بدنه‌ی اجرایی صنعت بنا شده است

اصل بنیادین عرضه و سامان‌دهی تأمین

منطق کاری کالاصنعتی بر این اصل استوار است که تجهیزات و کالاهای سنگین صنعتی باید در کوتاه‌ترین زمان ممکن، با اصالت تضمین‌شده و به‌صورت مستقیم از سوی تولیدکنندگان و بازرگانان معتبر، به خطوط تولید کارخانجات کشور برسند. کالاصنعتی با اتکا به زیرساخت دیجیتال و زنجیره‌ی لجستیک تخصصی خود، نقشی محوری در این سامان‌دهی و مدیریت یکپارچه‌ی زنجیره‌ی تأمین بر عهده دارد؛ فرایندی که نتیجه‌ی مستقیم آن، ساده‌سازی خریدهای پیچیده‌ی صنعتی، کاهش توقف و خطا در تأمین، و در نهایت افزایش بهره‌وری صنایع کشور است

وجوه تمایز و ارزش‌های ما

راهکارهای مهندسی و مشاوره‌ی فنی جامع: ارزش واقعی تأمین تجهیزات صنعتی، فراتر از تحویل صرف کالا، در ارائه‌ی مشاوره‌ی دقیق فنی-مهندسی و متناسب با شرایط خطوط تولید نهفته است. کارشناسان متخصص ما با ارائه‌ی دیتاشیت و نقد و بررسی فنی، خریدی آگاهانه و پایدار را برای مدیران فنی و تدارکاتی رقم می‌زنند؛ چرا که آموزش و اطلاع‌رسانی درست را بخشی جدایی‌ناپذیر از تأمین مسئولانه می‌دانیم

تأمین مسئولانه و روابط پایدار: همکاری مستمر با صنایع بزرگ فولاد، سیمان، پتروشیمی و مجموعه‌های دستگاه‌سازی سراسر کشور، حاصل تعهد ما به تأمین مسئولانه، تضمین اصالت و پایش دقیق کالا تا لحظه‌ی تحویل به خط تولید است

کالاصنعتی با پوشش گسترده‌ی نیازهای صنعت، سبد کالایی و خدمات مهندسی خود را در قالب هشت دیپارتمان تخصصی عرضه می‌کند

1. دیپارتمان تخصصی الکتروموتور: تأمین و توزیع جامع انواع الکتروموتورهای صنعتی و خانگی؛ شامل الکتروموتورهای تک‌فاز و سه‌فاز (پوسته‌ی آلومینیومی و چدنی)، ضدانفجار، ترمزدار، تخت، موتورهای کولری و نسل جدید موتورهای کم‌مصرف و هوشمند (CDLB)، به‌همراه کلیه‌ی لوازم جانبی

2. دیپارتمان تخصصی گیربکس‌های صنعتی: ارائه‌ی طیف وسیعی از تجهیزات انتقال قدرت؛ شامل گیربکس‌های حلزونی، هلیکال (شافت مستقیم)، بول‌هلیکال، چندمحوره و روسی، گیربکس‌های سنگین اکسترودر، بالابر، جک‌اسکرو، کتابی و انواع کاهنده‌های سرعت خطوط تولید

3. دیپارتمان تخصصی پمپ و تجهیزات سیالات: پاسخگویی جامع به مصارف خانگی، کشاورزی و صنعتی؛ با ارائه‌ی پمپ‌های خانگی، کشاورزی، استخری، دنده‌ای، لجن‌کش، کفکش، سیرکولاتور، جتی، بشقابی، شناور، وکیوم، کارواش، دوزینگ‌پمپ (تزریق)، مونوپمپ، پمپ‌های مگنتی، دیافراگمی، ساید چنل و انواع موتورپمپ‌های دیزلی و بنزینی

4. دپارتمان تجهیزات برق صنعتی و اتوماسیون: مدیریت و هوشمندسازی خطوط صنعتی؛ شامل انواع اینورترهای تک فاز و سه فاز (درایوهای صنعتی و آسانسوری)، سیستم‌های کنترلی CLP، تجهیزات فرمان و کلیدزنی، کنتاکتورها و انواع موتور و بیرره‌های استاندارد و فلانچ‌دار
5. دپارتمان تخصصی انرژی: تأمین راهکارها و تجهیزات جامع تبدیل و ذخیره‌سازی انرژی؛ شامل انواع موتور برق، ژنراتورهای صنعتی، باتری‌های تخصصی، سیستم‌های برق اضطراری و یوپی‌اس (SPU) و توسعه‌ی راهکارهای نوین انرژی خورشیدی (سولار)
6. دپارتمان تخصصی فن و تهویه صنعتی: پشتیبانی، طراحی و ارائه‌ی دامنه‌ی گسترده‌ای از سیستم‌های تهویه و جریان هوا؛ شامل انواع فن‌های صنعتی، هواکش‌ها، دمنده‌ها، مکندوها و تجهیزات تخصصی تهویه مطبوع کارگاهی و کارخانجاتی
7. دپارتمان قطعات صنعتی و قطعات یدکی: تأمین قطعات استراتژیک خطوط تولید؛ شامل انواع بلبرینگ‌های شیار عمیق، خودتنظیم و کف‌گرد، رولبرینگ‌های کروی، انواع یاتاقان‌های صنعتی و کوپلینگ‌های تخصصی (دنده‌ای، لقمه‌ای، دیسکی، میل‌پینی و xepue-N)
8. دپارتمان تخصصی ابزارآلات صنعتی: تأمین و تجهیز جامع کارگاه‌ها و واحدهای صنعتی با ارائه‌ی دامنه‌ی گسترده‌ای از ابزارآلات دستی، برقی، بادی و کارگاهی تخصصی؛ فراتر از مصارف عمومی و ابزارهای شارژی، جهت پشتیبانی کامل فرایندهای ساخت، مونتاژ، تعمیرات و نگهداری (ORM) در خطوط تولید





# AC70P

## Portable Power Station

### User Manual

Please Read This Manual Before Use And Follow Its Guidance.  
Keep This Manual For Future Reference.





### **⚠ Warning**

1. Charge the unit before first use.
2. Do not use solar panels with open circuit voltage higher than 58V. Solar input voltage range for the unit is 12V-58VDC.
3. Charge the unit immediately when the SoC drops below 5%. If the SoC drops to 0, power off the unit and charge it for at least 30 minutes before restarting.
4. The unit is for off-grid use only. Do not connect its AC output to the grid.
5. If not used for more than 3 months, charge the unit to 40%-60% SoC and store it with the power off. For optimum battery life, discharge and charge the unit every 3 months.

## Thank You

Thank you for making BLUETTI a part of your family.

From the very beginning, BLUETTI has tried to stay true to a sustainable future through green energy storage solutions while delivering an exceptional eco-friendly experience for our homes and our world.

That's why BLUETTI makes its presence in 100+ countries and is trusted by millions of customers across the globe.



**Copyright © Shenzhen PowerOak Newener Co., Ltd. All rights reserved.**

No part of this document may be reproduced or transmitted in any form or by any means without the prior written consent of Shenzhen PowerOak Newener Co., Ltd.

### Notice

BLUETTI's products, services, and features are subject to the agreed-upon terms and conditions during purchase. Please note that some products, services, or features described in this manual may not be available under your purchase contract. Unless otherwise specified in the contract, BLUETTI makes no representations or warranties of any kind, express or implied, with respect to the contents of this manual.

The contents of this manual are subject to change without notice. Please get the latest version from: <https://www.bluettipower.com/pages/user-guides>

If you have any questions or concerns about this manual, please contact BLUETTI support for further assistance.

## Contents

|    |                                        |    |
|----|----------------------------------------|----|
| 1  | Safety Instructions .....              | 05 |
| 2  | Packing List.....                      | 09 |
| 3  | Product Overview .....                 | 11 |
| 4  | Power ON/OFF.....                      | 12 |
| 5  | LCD Screen .....                       | 13 |
| 6  | Charging .....                         | 15 |
| 7  | Discharging .....                      | 17 |
| 8  | Settings .....                         | 17 |
| 9  | BLUETTI App.....                       | 19 |
| 10 | Specifications.....                    | 19 |
| 11 | Troubleshooting .....                  | 21 |
|    | Appx. 1 Estimating Operation Time..... | 22 |
|    | Appx. 2 FAQs .....                     | 23 |

# 1. Safety Instructions

Read this manual for instructions on the proper use and safety information for the product. The safety instructions provided herein are for illustrative purposes that include but are not limited to those listed in this manual. Actual operation shall comply with all applicable safety standards. If you have any questions, feel free to contact BLUETTI support or your local BLUETTI dealers.

## 1.1 Statement

To ensure a safe operation, it's crucial to observe and adhere to the following conditions:

- Always operate or store the product in the conditions specified in this manual.
- Avoid unauthorized disassembly, component replacement, or modification of software codes.

**⚠** *BLUETTI shall not be liable for damages resulting from the following circumstances:*

- Force majeure events such as earthquakes, fires, storms, floods, or mudslides.
- Damage caused by the customer's own transportation.
- Damage resulting from inadequate storage conditions as specified in the manual.
- Damage caused by customer negligence, improper operation, or intentional actions.
- System or hardware damage caused by third parties or customers, including but not limited to improper handling and installation not in accordance with the instructions in this manual.
- Usage of the product with devices that require a high-performance Uninterruptible Power Supply (UPS), including but not limited to data servers, workstations, medical equipment, and other similar devices.

## 1.2 General Requirements

### INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using this product, basic precautions should always be followed, including the following:

- a. Read all the instructions before using the product.
- b. To reduce the risk of injury, close supervision is necessary when the product is used near children.
- c. Do not put fingers or hands into the product. And do not insert foreign objects into any ports of the product.
- d. Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
- e. To reduce the risk of damage to the electric plug and cord, pull the plug rather than

the cord when disconnecting the product.

f. Do not use a battery pack or appliance that is damaged or modified, as they may exhibit unpredictable behavior resulting in fire, explosion, or personal injury.

g. Do not operate the product with a damaged cord or plug, or a damaged output cable.

h. DO NOT attempt to replace the internal battery or any other component of the product by anyone other than authorized personnel. There are no end-user serviceable components. Do not disassemble the product, take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.

i. To reduce the risk of electric shock, unplug the product from the outlet before attempting any instructed servicing.

j. WARNING - RISK OF EXPLOSIVE GASES. To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacturer and manufacturer of any equipment you intend to use in the vicinity of the battery. Review cautionary markings on these products and engines.

k. PERSONAL PRECAUTIONS

1) Wear complete eye protection and clothing protection. Avoid touching eyes while working near the battery.

2) NEVER smoke or allow a spark or flame in the vicinity of the battery or engine.

3) Be extra cautious to reduce the risk of dropping a metal tool onto the battery. It might spark or short-circuit the battery or other electrical parts which may cause an explosion.

l. When charging the internal battery, work in a well ventilated area and do not restrict ventilation in any way.

m. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

n. Do not expose the product to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause an explosion.

o. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that safety is maintained.

p. DO NOT operate in wet conditions. If the product becomes wet, please thoroughly dry it before using.

q. Please ensure proper ventilation while in use and do not obstruct fan openings. Inadequate ventilation may cause permanent damage to the product.

r. DO NOT stack anything on top of the product while in storage or use. DO NOT move the product while operating as vibrations and sudden impacts may lead to poor connections to the hardware inside.

- s. In case of fire, use only a dry powder fire extinguisher appropriate for the product.
- t. **WARNING - RISK OF ELECTRIC SHOCK.** Never use the product to supply power tools to cut or access live parts or live wirings, or materials that may contain live parts or live wirings inside, such as building walls, etc.
- u. To avoid contact with any liquids, do not use this product in the rain or high humidity.

### **1.3 Grounding Instructions**

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

#### **WARNING**

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

### **1.4 Storage Instructions**

- a. When the SoC drops to 5%, please charge the product immediately.
- b. Before storing the product, charge it to 40% to 60% SoC to keep it in optimal condition. In addition, power off the unit and disconnect all electrical connections from it.
- c. Store the product in a cool and dry place, keeping it away from flammable or combustible materials and gases.
- d. The product can be safely stored within a temperature range of -20°C to 40°C (-4°F to 104°F). However, if the storage duration exceeds one month, it's recommended to maintain an ideal storage temperature of around 30°C (86°F).
- e. Fully cycle the product every 3 months to maintain the battery's health. It's NOT recommended to store the unit for extended periods of time, as it may affect its performance and overall lifespan.

If the SoC drops to 0 (during storage or upon startup), take the following actions to safely restart the product:

- Shut down immediately.
- Charge within 48 hours.
- Keep it at an ambient temperature of 5°C to 35°C (41°F to 95°F) for 24 hours before charging. It's recommended to charge the product via an AC source. If charging via solar energy, ensure that your solar system provides an output of more than 100W.

 *BLUETTI shall not be liable for any equipment damage caused by the violation of the above instructions.*




#### SAVE THESE INSTRUCTIONS

  The symbol displayed is intended to remind you to read the instructions in the literature accompanying the product before operation and maintenance.

- Connect the product to a socket-outlet that has an earthing connection using the power cord provided.
- The socket-outlet should be installed near the product and easily accessible for safety purposes.
- NEVER dispose of a battery by throwing it into fire or a hot oven, or by mechanically crushing or cutting it, as these may cause it to explode.
- Avoid leaving batteries in extremely high-temperature environments, as this can result in an explosion or the leakage of flammable liquid or gas.
- The battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Attention should be drawn to the environmental aspects of battery disposal.
- Please refer to the information on the exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.




## 2. Packing List

### Standard Packaging

| Item                       | Picture                                                                             | Qty. |
|----------------------------|-------------------------------------------------------------------------------------|------|
| Portable Power Station     |    | 1    |
| AC Charging Cable          |   | 1    |
| Car Charging Cable         |   | 1    |
| Solar Charging Cable       |   | 1    |
| Grounding Screw<br>(M5×10) |  | 1    |
| User Manual                |  | 1    |
| Warranty Card              |  | 1    |

## Optional Accessories


(Available on official BLUETTI website)
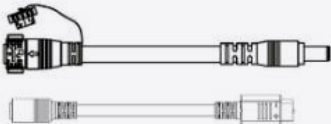
| Item                                                                                                                 | Picture                                                                              |
|----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| USB-C to USB-C Cable<br>(Output)                                                                                     |    |
| Cigarette Lighter to DC5521 Cable<br>(For 12V devices with DC5521 port,<br>such as routers, cameras, etc.)           |    |
| Lead-acid Battery Charger<br>(Charge a 12V/10A lead-acid battery via AC70P.<br>For gasoline vehicle batteries only.) |    |
| Lead-acid Battery Charging Cable Kit<br>(Charge the AC70P via a lead-acid battery.)                                  |   |
| Battery Connection Cable Kit<br>(Charge the AC70P via an expansion<br>battery in Power Bank mode.)                   |  |

### 3. Product Overview


Meet the AC70P portable power station - the ultimate companion for your travel and adventure needs. With a 1000W pure sine wave inverter and 864Wh LiFePO<sub>4</sub> battery, it offers ample power for all your outing gadgets like phones, laptops, car refrigerators, and air conditioners. When you require even more power, it boasts the innovative Power Lifting mode to tackle higher resistive demands of up to 2000W, perfect for hairdryers, kettles, and other heating appliances. Thanks to Turbo Charging technology, you can enjoy the convenience of an 80% charge in just 45 minutes, and a full charge in 1.5 hours.

Whether you're embarking on outdoor adventures, road trips, or camping trips with friends, the AC70P is built to accompany you every step of the way. So, go ahead and embrace your travel plans with confidence, knowing that the AC70P will provide reliable power whenever you need it.

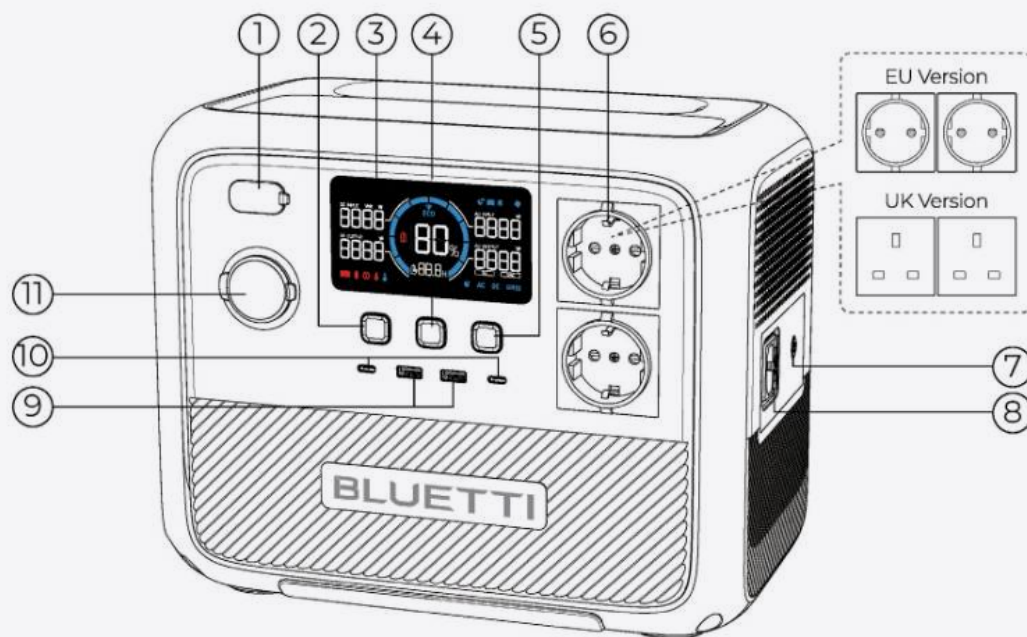


- |                   |                          |
|-------------------|--------------------------|
| ① DC Input        | ⑦ Grounding Pole         |
| ② DC Power Button | ⑧ AC Input               |
| ③ LCD Screen      | ⑨ USB-A Port             |
| ④ Power Button    | ⑩ USB-C Port             |
| ⑤ AC Power Button | ⑪ Cigarette Lighter Port |
| ⑥ AC Output       |                          |

## 4. Power ON/OFF

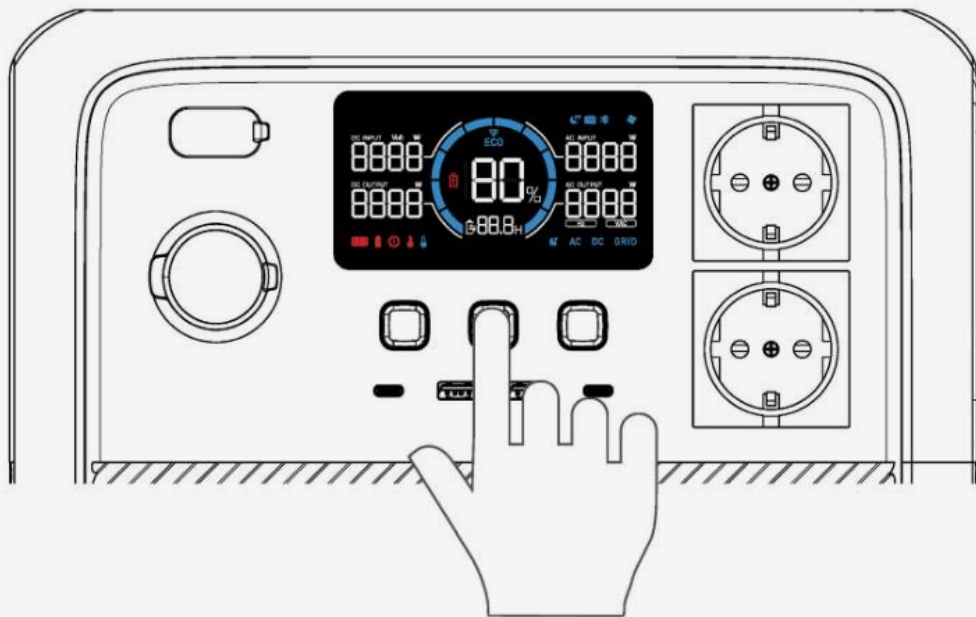

- Power ON: Press and hold the  for about 2 seconds to turn AC70P on.  
When the AC70P is on, press the  again to turn on / off the LCD screen.
- Power OFF: Press and hold the  for 2 seconds to turn off the unit.
- AC ON / OFF: When the AC70P is on, press the AC power button to turn it on / off.
- DC ON / OFF: When the AC70P is on, press the DC power button to turn it on / off.

## 5. LCD Screen

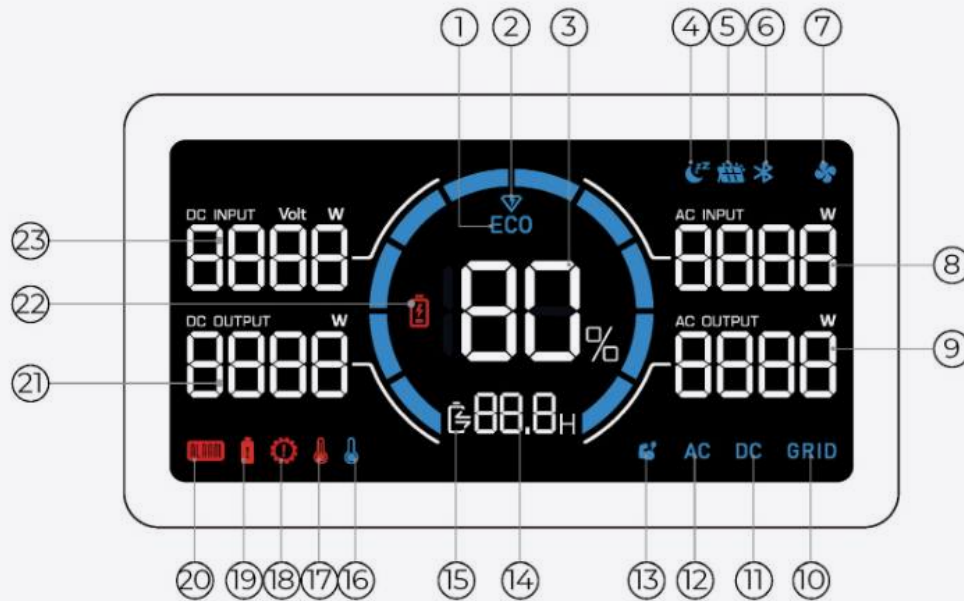

- |                          |                                     |
|--------------------------|-------------------------------------|
| ① ECO Mode               | ⑬ Power Lifting Mode                |
| ② Turbo Charging         | ⑭ Charge / Discharge Remaining Time |
| ③ Battery Capacity (SoC) | ⑮ Charge / Discharge Status         |
| ④ Silent Charging        | ⑯ Low Temperature Alert             |
| ⑤ DC Input               | ⑰ High Temperature Alert            |
| ⑥ Bluetooth Connection   | ⑱ Overload Alert                    |
| ⑦ Fan                    | ⑲ Overcurrent Alert                 |
| ⑧ AC Input Power         | ⑳ Fault Alert                       |
| ⑨ AC Output Power        | ㉑ DC Output Power                   |
| ⑩ Grid Connection        | ㉒ Low Voltage Alert                 |
| ⑪ DC Output              | ㉓ DC Input Power                    |
| ⑫ AC Output              |                                     |


| LCD Instructions                         |                                                                                                         |
|------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Startup                                  | LCD lights up                                                                                           |
| Shutdown                                 | LCD lights off                                                                                          |
| ECO Mode enabled                         | <b>ECO</b> displays                                                                                     |
| Turbo Charging enabled                   |  displays            |
| State of Charge                          | <b>100%</b>                                                                                             |
| Silent Charging enabled                  |  displays            |
| DC input                                 |  displays            |
| Bluetooth connected                      |  displays            |
| Fan on or abnormal                       |  displays or flashes |
| AC input power                           | <b>AC INPUT</b><br><b>8888</b> W                                                                        |
| AC output power                          | <b>AC OUTPUT</b><br><b>8888</b> W                                                                       |
| AC input                                 | <b>GRID</b> displays                                                                                    |
| DC output enabled                        | <b>DC</b> displays                                                                                      |
| AC output enabled                        | <b>AC</b> displays                                                                                      |
| Power Lifting Mode enabled               |  displays          |
| Remaining charge / discharge time (hour) | <b>88.8h</b> displays                                                                                   |
| Charging or discharging                  |  displays          |
| Abnormal temperature                     |  displays          |
| Connected device(s) overheating          |  displays          |
| Overload                                 |  displays          |
| Overcurrent                              |  displays          |
| Error code report                        | <b>ALARM</b> displays                                                                                   |
| DC output power                          | <b>DC OUTPUT</b><br><b>8888</b> W                                                                       |
| Battery low (below 5%)                   |  displays          |
| DC input power                           | <b>DC INPUT</b><br><b>8888</b> W displays                                                               |

## 6. Charging

AC70P supports four charging methods: AC, solar, car, and generator.

### 6.1 AC Charging

Plug the AC70P into a standard wall outlet and start charging. Once it's fully charged, the AC70P automatically stops charging to prevent overcharging. For a fast charge, you can enable Turbo Charging in the BLUETTI App, which allows for an 80% capacity in just 45 minutes at an ambient temperature of 25°C (77 °F).

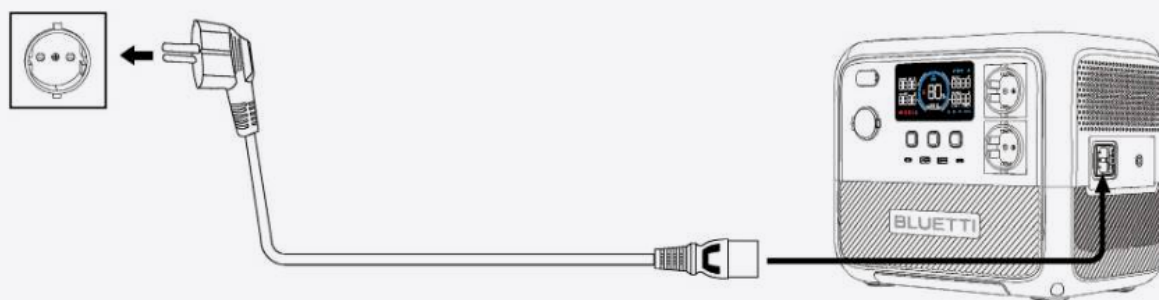


### 6.2 Solar Charging

Connect the solar panels (in series or parallel) to AC70P via the solar charging cable. When receiving a continuous input of 500W, the AC70P will automatically stop charging within 2 hours. However, please be aware that the charging time may vary based on weather conditions, sunlight intensity, panel orientation, and other variables.

**Note:** Make sure your solar panels meet the following requirements:

Voc: 12V-58V    Current: 10A Max.    Power: 500W Max.

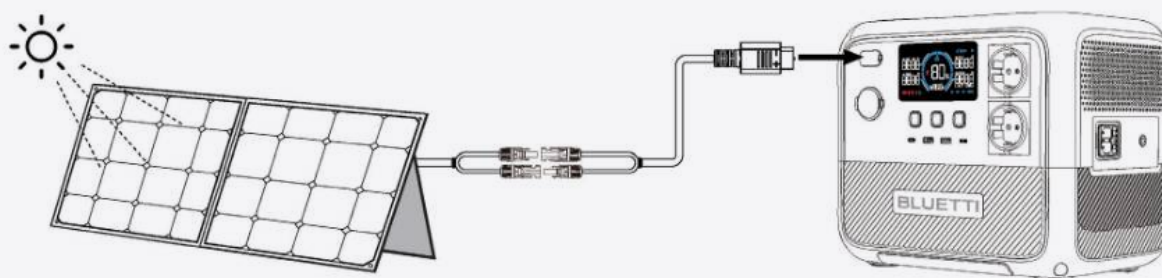


### 6.3 Car Charging

Connect the AC70P to the vehicle's 12V / 24V cigarette lighter port via the car charging cable. The AC70P also automatically stops charging when it's fully charged. On average, it takes about 7-9 hours to refill the AC70P using a 12V port and 4-5 hours with a 24V port at an ambient temperature of 25°C (77 °F).

**Note:** Make sure your vehicle meets the following conditions for charging:

- The vehicle is capable of supplying power.
- The vehicle's engine is running during the charging process.

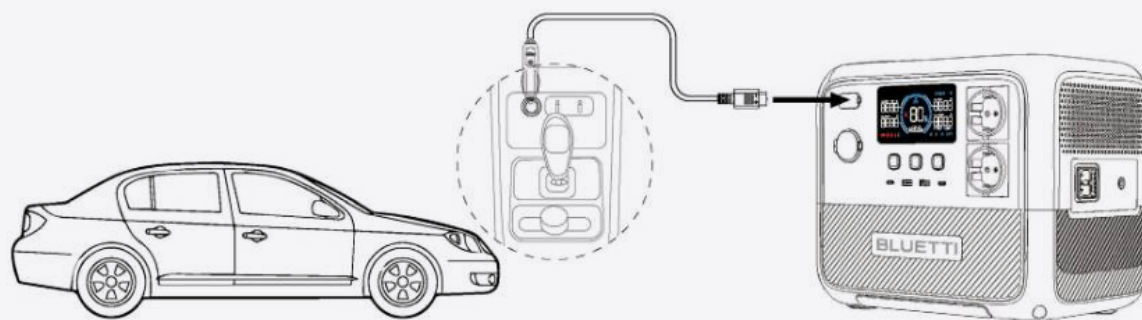


### 6.4 Generator Charging

Connect the AC70P to a generator via the AC charging cable. Under optimal conditions, it takes approximately 2 hours to reach a full charge at an ambient temperature of 25°C (77 °F).

**Note:** Make sure your generator meets the following conditions for charging:

- The generator boasts a stable power output that exceeds the charging requirement of the AC70P.
- The generator delivers a pure sine wave AC output with voltage and frequency that meet AC70P's specifications.

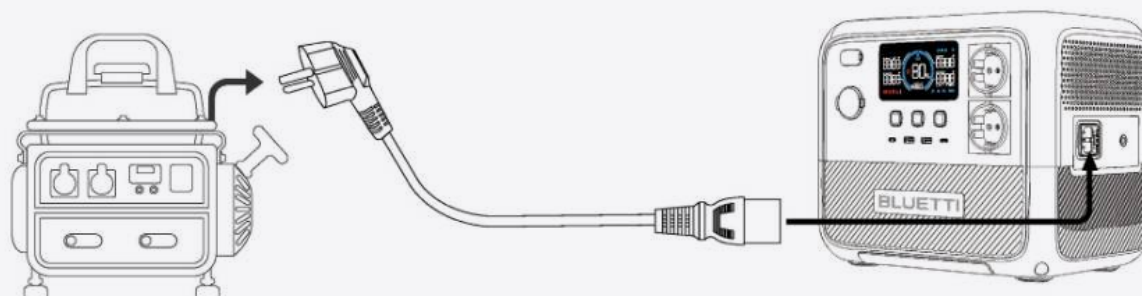

**⚠** For stable and efficient charging, avoid using unreliable power sources like wind turbines. Also, it's not recommended to run your devices with AC70P while it's charging with a generator.

## 7. Discharging

### 7.1 AC Discharging

| Item          | Specifications      | Compatible Loads                                                       |
|---------------|---------------------|------------------------------------------------------------------------|
| 2 × AC Outlet | 230V<br>50Hz / 60Hz | Appliances up to 1000W power.<br>e.g., air conditioners, refrigerators |

**Note:** Do not apply AC70P to loads higher than 1000W, as this may cause damage to AC70P and your devices.

### 7.2 DC Discharging

| Item                      | Specifications                     | Compatible Loads                                                               |
|---------------------------|------------------------------------|--------------------------------------------------------------------------------|
| Cigarette<br>Lighter Port | 12V / 10A                          | 12V DC appliances up to 120W power.<br>e.g., car refrigerator, air conditioner |
| 2 × USB-A Port            | 5V / 2.4A                          | Mobile phones and other small loads.                                           |
| 2 × USB-C Port            | 5 / 9 / 12 / 15 / 20V, 3A; 20V, 5A | Mobile phones, laptops, etc.                                                   |

**Note:** To ensure optimal performance, avoid short-circuiting the ports and keep them dry during use or storage. Additionally, do not block or cover the ports while ensuring proper ventilation.

## 8. Settings

The AC70P offers the convenience of adjusting its settings either via physical buttons or BLUETTI App. With the buttons located on the device itself, you have direct control over various settings such as ECO Mode, output frequency, charging modes, and other functionalities. Additionally, by using the BLUETTI App, you can access a user-friendly interface on your phone to conveniently monitor and control the AC70P.

### 8.1 Setting Mode

When the AC70P is powered on, press and hold the AC and DC power buttons for about 2 seconds till the frequency indicator flashes to enter Setting Mode.

Press and hold the AC and DC power buttons at the same time to exit Setting Mode.

**Note:** If you do not perform any operation in 1 minute, the AC70P will automatically exit Setting Mode and no changes will be saved.

## 8.2 ECO Mode

ECO Mode is a power-saving mode that is enabled by default. When operating on ECO Mode, the AC / DC output will automatically turn off if the AC70P is bearing low (less than 40W or the set power) or no load for a while.

**Note:** When connecting a small power device, disable the ECO Mode for a successful and uninterrupted charge experience.

In the Setting Mode, use the DC power button to navigate until the **ECO** icon starts flashing on the screen. Then, press the AC power button to enable or disable the mode.

## 8.3 Frequency Switching

The current output frequency (50Hz / 60Hz) is displayed in the lower right corner of the screen. To change the frequency, access the Setting Mode, press the DC power button and the frequency starts flashing. Then, press the AC power button to switch between the available frequency options.

## 8.4 Power Lifting Mode

Power Lifting Mode allows AC70P to handle high-power resistive loads up to 2000W, which is disabled by default. In the Setting Mode, use the DC power button to navigate until the  icon starts flashing on the screen. Then, press the AC power button to enable or disable the mode.

This mode is particularly useful when using the AC70P with demanding heating devices such as kettles, electric blankets, and hairdryers. If the screen reads "OVERLOAD" while operating such devices, activating Power Lifting mode allows the AC70P to tackle these tasks effectively.

**Note:** The resistive loads should have a power rating between 1000W and 2000W. Although the AC70P can handle higher power demands, its actual operating power remains at 1000W.

## 8.5 Bluetooth On/Off

In the Setting Mode, use the DC power button to navigate until the  icon starts flashing on the screen. Then, press the AC power button to turn the Bluetooth on or off.

## 8.6 AC Charging Mode

The AC70P supports three AC charging modes - Standard, Turbo, and Silent to fit your specific needs. In the Setting Mode, use the DC power button to navigate until the  or  icon starts flashing on the screen. Then, press the AC power button to enable or disable these two modes.

### AC Charging Instructions

| Icon                                                                              | Mode     | Recharging Time               | Note                                                 |
|-----------------------------------------------------------------------------------|----------|-------------------------------|------------------------------------------------------|
| None                                                                              | Standard | 2 hours                       | Reduces battery wear and tear for long battery life. |
|  | Turbo    | 1.5 hours<br>0-80% in 45 mins | Convenient when recharging time is a priority.       |
|  | Silent   | 4 hours                       | Offers a quiet, low-power operation.                 |

## 9. BLUETTI App

Scan the QR code below or search "BLUETTI" in the App Store or Google Play to download the BLUETTI App.



For more details, please refer to BLUETTI APP INSTRUCTIONS.

## 10. Specifications

| Model                   | AC70P                                               |    |    |              |
|-------------------------|-----------------------------------------------------|----|----|--------------|
| Country / Region        | JP                                                  | US | CN | EU / UK / AU |
| Battery Capacity        | 864Wh                                               |    |    |              |
| Cell Type               | LiFePO <sub>4</sub>                                 |    |    |              |
| AC + DC Input           | 1000W Max.                                          |    |    |              |
| Net Weight              | 10.2kg / 22.5lbs                                    |    |    |              |
| Dimensions (L*W*H)      | 314mm × 209.5mm × 255.8mm / 12.4in × 8.2in × 10.1in |    |    |              |
| Charging Temperature    | 0°C-40°C / 32°F-104°F                               |    |    |              |
| Discharging Temperature | -20°C-40°C / -4°F-104°F                             |    |    |              |
| Storage Temperature     | -20°C-40°C / -4°F-104°F                             |    |    |              |
| Working Humidity        | 10%-90%                                             |    |    |              |

| Country / Region             | JP                                                        | US     | CN     | EU / UK / AU |
|------------------------------|-----------------------------------------------------------|--------|--------|--------------|
| AC Output                    |                                                           |        |        |              |
| Power                        | 1000W in total                                            |        |        |              |
| Voltage                      | 100VAC                                                    | 120VAC | 220VAC | 230VAC       |
| Current                      | 10A                                                       | 8.3A   | 4.5A   | 4.3A         |
| Frequency                    | 50Hz / 60Hz                                               |        |        |              |
| DC Output                    |                                                           |        |        |              |
| Cigarette Lighter Port       | 12VDC / 10A                                               |        |        |              |
| USB-A *2                     | 5VDC / 2.4A each port                                     |        |        |              |
| USB-C *2                     | 5 / 9 / 12 / 15 / 20VDC, 3A; 20VDC, 5A each port          |        |        |              |
| Wireless Charging            | 5W/7.5W/10W/15W                                           |        |        |              |
| AC Input                     |                                                           |        |        |              |
| Voltage                      | 100VAC                                                    | 120VAC | 220VAC | 230VAC       |
| Max. Current                 | 9A                                                        | 9A     | 6A     | 6A           |
| Frequency                    | 50Hz / 60Hz                                               |        |        |              |
| UPS                          | Switching time ≤20ms                                      |        |        |              |
| Power                        | 850W Max. (0%-80% in 45 minutes @ 10°C-40°C / 50°F-104°F) |        |        |              |
| DC Input                     |                                                           |        |        |              |
| Interface                    | XT60PM-M                                                  |        |        |              |
| Power                        | 500W Max.                                                 |        |        |              |
| Current                      | 10A Max.                                                  |        |        |              |
| Voltage                      | 12V-58VDC                                                 |        |        |              |
| Bluetooth 5.0 / 5.1          |                                                           |        |        |              |
| Max. Transmission Frequency  | 125kbps                                                   |        |        |              |
| Max. RF Transmission Power   | +12dBm                                                    |        |        |              |
| Receiver Sensitivity         | -99dBm / 1Mbps                                            |        |        |              |
| Wireless Charging            |                                                           |        |        |              |
| Transmission Frequency Range | 110k-205kHz                                               |        |        |              |
| Max. RF Transmission Power   | 15W                                                       |        |        |              |

## 11. Troubleshooting

In the Setting Mode, press and hold the DC power button until an error code appears on the screen. Please refer to the table below for helpful guidance.

| Error Code | Error Description                        | Troubleshooting                                                                                        |
|------------|------------------------------------------|--------------------------------------------------------------------------------------------------------|
| E001       | Inverter overload                        | Check if the power consumption of your devices is too high. Reduce the load if necessary.              |
| E002       | Temperature protection                   | Check if any of your devices are overheating. Allow them to cool down before use.                      |
| E003       | Inverter short circuit                   | Check if any of your electrical devices are causing a short circuit. Disconnect and resolve the issue. |
| E004       | Output failure                           | The output voltage is abnormal. Inspect the machine for any malfunctions or irregularities.            |
| E016       | Fan failure                              | Check if the fan is blocked, unplugged, or not functioning properly. Ensure proper ventilation.        |
| E033       | PV overvoltage                           | Make sure the PV input voltage is within the range of 12V-58VDC.                                       |
| E065       | Cigarette lighter output short circuit   | Check if the power consumption of your devices is too high. Reduce the load if necessary.              |
| E068       | Cigarette lighter output overtemperature | Wait for the device connected to the cigarette lighter port to cool down.                              |
| E085       | Charging temperature too high            | Wait for the unit to cool down before charging.                                                        |
| E086       | Charging temperature too low             | Make sure the unit is placed in an ambient temperature of 0°C-40°C (32°F-104°F).                       |
| E087       | Discharging temperature too high         | Wait for the unit to cool down before discharging.                                                     |
| E088       | Discharging temperature too low          | Make sure the unit is placed in an ambient temperature of 0°C-40°C (32°F-104°F).                       |
| E113       | Grid overvoltage                         | Check if the grid voltage is too high. Contact your local power provider if necessary.                 |
| E114       | Grid undervoltage                        | Check if the grid voltage is too low. Contact your local power provider if necessary.                  |
| E115       | Grid overfrequency                       | Check if the grid frequency is too high. Contact your local power provider if necessary.               |
| E116       | Grid underfrequency                      | Check if the grid frequency is too low. Contact your local power provider if necessary.                |
| E117       | Grid oscillation                         | Disconnect the grid input and contact BLUETTI support for further assistance.                          |
| Others     | /                                        | Please contact BLUETTI support for assistance.                                                         |

## Appx. 1 Estimating Operation Time

To estimate the operation time of the AC70P, consider the load you're applying:

- For high-power loads (above 300W):

$$\text{Operation time} = \text{Battery Capacity (Wh)} \times \text{DoD} \times \eta \div \text{Load Power}$$

- For small-power loads (below 300W):

$$\text{Operation time} = \text{Battery Capacity (Wh)} \times \text{DoD} \times \eta \div (\text{Load Power} + \text{Self-consumption of AC70P})$$

**Note:** DoD refers to depth of discharge. AC70P works at 90% DoD for longer battery life.

$\eta$  is the conversion efficiency of the inverter, typically over 85% for AC70P.

The self-consumption of AC70P is approximately 15W.

**E.g.** If you have a 40W refrigerator, you can run it for about 12 hours.

$$\text{Operation time} = 864\text{Wh} \times 90\% \times 85\% \div (40\text{W} + 15\text{W}) \approx 12 \text{ hours.}$$

Please keep in mind that the estimated operation time provided is for only purposes and may vary based on actual usage conditions. Factors such as low temperature and excessive loads can significantly affect the battery capacity, leading to a reduction in the average operation time.

## Appx. 2 FAQs

**Q1:** How do I know whether my devices will work well with this product?

**A:** Please evaluate the total constant load of your devices. If it doesn't exceed the Max. output power of AC70P (1000W), you can use this power station to run your devices.

Note: Some devices with built-in motor or compressor may start at 2-4 times the rated power, which can easily overload the AC70P.

**Q2:** Can I use third-party solar panels to charge this product?

**A:** Yes, you can. However, make sure your solar panels have an open circuit voltage of 12V-58V and are equipped with MC4 connectors. It's also important not to mix different types of solar panels.

**Q3:** Can it charge and discharge at the same time?

**A:** Yes. It supports pass-through charging. The AC70P comes with the premium LiFePO<sub>4</sub> battery and proprietary Battery Management System to ensure that it can charge and discharge at the same time.

**Q4:** What is ECO Mode and can I turn it off?

**A:** ECO Mode helps save power, and you can turn it on or off on the screen. When operating on ECO Mode, the AC / DC output will automatically turn off if the AC70P is bearing low or no load for a while. You can set the power threshold of AC output and DC output to 10W-30W / 5W-10W, respectively, for 1, 2, 3, or 4 hours.

**Q5:** Why is the charging power often too low?

**A:** AC70P has a built-in intelligent BMS that automatically adjusts the charging power in response to the battery temperature and SoC, thus protecting the battery and extending its service life.