

JPA, JPC, JPD PT

Pumps and boosters

Installation and operating instructions



English (GB) Installation and operating instructions

Original installation and operating instructions

These installation and operating instructions describe Grundfos JPC, JPA and JPD pumps.

Sections 1-3 give the information necessary to be able to unpack, install and start up the product in a safe way.

Sections 4-8 give important information about the product, as well as information on service, fault finding and disposal of the product.

CONTENTS

	Page
1. General information	2
1.1 Symbols used in this document	2
2. Installing the product	3
2.1 Checking the product prior to installation	3
2.2 Location	3
2.3 Mechanical installation	3
2.4 Electrical connection	5
3. Starting up the product	6
3.1 Priming the pump	6
3.2 Shaft seal run-in	6
4. Product introduction	7
4.1 JPA JPC	7
4.2 JPA PM, JPC PM, JPA PT, JPC PT	7
4.3 JPD PT	7
4.4 Identification	8
5. Servicing the product	9
5.1 Maintaining the product	9
5.2 Spare parts and kits	9
6. Fault finding	10
7. Technical data	11
8. Disposing of the product	12



Read this document and the quick guide before installing the product. Installation and operation must comply with local regulations and accepted codes of good practice.



This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Make sure that the system in which the pump is incorporated is designed for the maximum pump pressure.



This pump has been evaluated for use with water only.

1. General information

1.1 Symbols used in this document

DANGER



Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.

WARNING



Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

CAUTION



Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The text accompanying the three hazard symbols DANGER, WARNING and CAUTION is structured in the following way:

SIGNAL WORD

Description of hazard



Consequence of ignoring the warning.
- Action to avoid the hazard.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



Tips and advice that make the work easier.



If these instructions are not observed, it may result in malfunction or damage to the equipment.

2. Installing the product



Observe local regulations concerning limits for manual lifting or handling.

CAUTION



Crushing of feet

Minor or moderate personal injury

- Use safety shoes when handling the pump.

2.1 Checking the product prior to installation

Check that the rotating parts turn freely. Position numbers refer to fig. 1.

1. Remove the fan cover (13) from the motor.
2. Insert a screwdriver in the notch on the motor shaft.
3. If the rotor is blocked, turn the screwdriver, tapping it gently with a hammer.

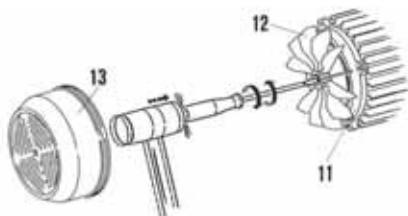


Fig. 1 Checking the rotating parts

2.2 Location

Install the pump in a well-ventilated location, protected from rain, snow and direct sunlight. The ambient temperature must not exceed 35 or 55 °C. See the nameplate.

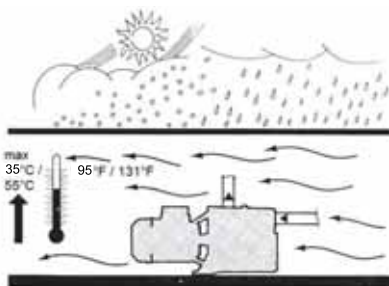


Fig. 2 Weather conditions

We recommend that you place the pump as close as possible to the liquid to be pumped.

2.2.1 Frost protection

If the pump is not used during periods of frost, it must be drained to avoid damage.

Remove the drain plug to drain the pump. See fig. 3.



Fig. 3 Draining the pump

2.3 Mechanical installation

2.3.1 Positioning the product

Install the pump in horizontal position.

Install the pump so that it is not stressed by the pipes.

We recommend that you fasten the pump to the foundation and use pipe hangers, thus ensuring that vibrations caused by pump operation are absorbed. See fig. 4.

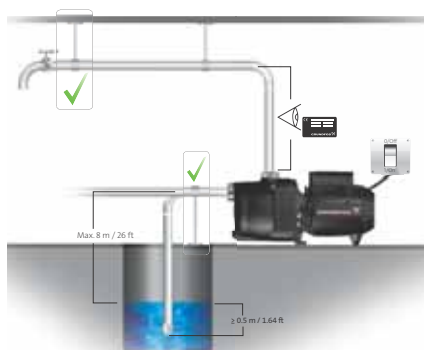


Fig. 4 Fastening the pump and the pipes

TM06 8026 4516

TM06 4529 2515

TM06 4530 2515

TM06 8024 4216

2.3.2 Pipe connection



The internal diameters of the pipes must never be smaller than that of the openings of the pump.

If the inlet pipe is longer than 10 m or the suction lift is greater than 4 m, the diameter of the pipe must be larger than 1". If a hose is used as inlet pipe, it must be non-collapsible.

To prevent solids from entering the pump, you can fit a filter to the inlet pipe. We recommend that you fit a foot valve on the inlet side.

For suction lifts of over 4 m or for long horizontal stretches, we recommend that you use an inlet pipe with a diameter larger than the inlet opening of the pump.



To prevent formation of air pockets, the inlet pipe must slope slightly upwards towards the pump. See fig. 5.

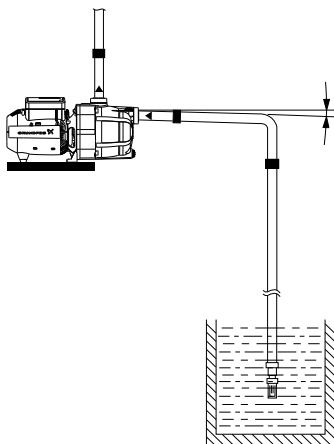


Fig. 5 Inlet pipe sloping upwards

TM06 4532 2515

2.3.3 JPD deep-well installation

A JPD must have the ejector installed in the well. This means that two pipes are needed for the suction installation.

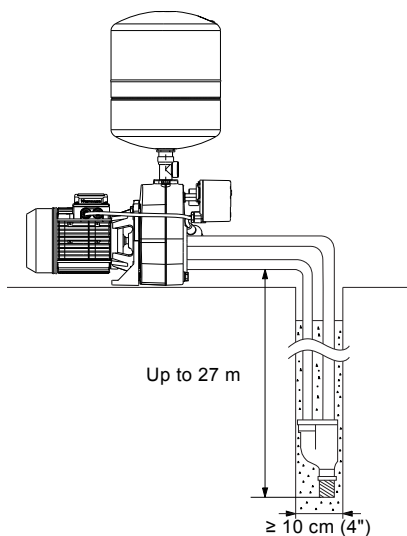


Fig. 6 JPD PT installation

TM06 5436 4615

2.4 Electrical connection

Carry out the electrical connection according to local regulations.

Check that the supply voltage and frequency correspond to the values stated on the nameplate and that it is possible to make a good earth connection.

Single-phase motors incorporate a thermal switch and require no additional motor protection.

DANGER

Electric shock

Death or serious personal injury

- Before starting any work on the product, make sure that the power supply has been switched off and that it cannot be accidentally switched on.



DANGER

Electric shock

Death or serious personal injury

- The protective earth of the socket outlet must be connected to the protective earth of the pump. The plug must therefore have the same PE connection system as that of the socket outlet. If not, use a suitable adapter.



We recommend that you fit the permanent installation with a residual-current circuit breaker (RCCB) with a tripping current less than 30 mA.

DANGER

Electric shock

Death or serious personal injury

- If the pump is used for cleaning or maintenance of swimming pools, garden ponds or similar places, make sure that the pump is supplied through a residual-current circuit breaker, RCCB, with a rated residual operating current of 30 mA.



DANGER

Electric shock

Death or serious personal injury

- Power supply cables without a plug must be connected to a supply disconnecting device incorporated in the fixed wiring according to the local wiring rules.



DANGER

Electric shock

Death or serious personal injury

- The pump must be earthed.



2.4.1 Wiring diagram

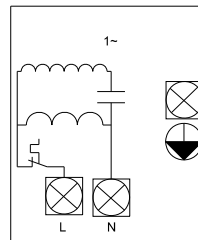


Fig. 7 1-phase pumps

TM06 3322 5015

3. Starting up the product

WARNING

Flammable material



- Death or serious personal injury
- Do not use the pump for flammable liquids, such as diesel oil, petrol or similar liquids.

CAUTION

Impurities in water



- Minor or moderate personal injury
- Flush the system with clean water to remove all impurities before you start the pump.

CAUTION

Hot surface



- Minor or moderate personal injury
- Do not run pump continuously with a closed inlet or outlet valve.

WARNING

Corrosive substance



- Death or serious personal injury
- Do not use the pump for aggressive liquids.

CAUTION

Hot or cold liquid



- Minor or moderate personal injury
- Make sure that the escaping hot or cold liquid does not cause injury to persons or damage to the equipment.



CAUTION

Hot surface



- Minor or moderate personal injury
- Use protective gloves if the liquid or ambient temperature is higher than 40 °C.

DANGER

Electric shock



- Death or serious personal injury
- Do not use the pump in swimming pools, garden ponds or similar places if there are people in the water.



Do not start the pump until it has been filled with liquid.



The pump must not be started more than 20 times per hour.



The pump must not run without delivering water for more than five minutes.

3.1 Priming the pump

1. Remove the priming plug. See fig. 8.
 2. Fill the pump with water.
 3. Refit the priming plug and tighten by hand.
- The pump can now be started.



Fig. 8 Priming the pump

If there is a suction lift, up to five minutes may pass from the moment the pump is started until it delivers water. This period depends on the length and diameter of the inlet pipe.



Do not start the pump until it has been filled with liquid.

3.2 Shaft seal run-in

The seal faces are lubricated by the pumped liquid, meaning that there may be a certain amount of leakage from the shaft seal.

When the pump is started up for the first time, or when a new shaft seal has been installed, a certain run-in period is required before the leakage is reduced to an acceptable level. The time required for this depends on the operating conditions, i.e. every time the operating conditions change, a new run-in period will be started.

Under normal conditions, the leaking liquid will evaporate. As a result, no leakage will be detected.

TM06 8025 4516

4. Product introduction

4.1 JPA JPC

JPA and JPC pumps are horizontal, self-priming centrifugal pumps.

JPA pumps are made of cast iron, and the JPC pumps are made of a composite material.

The pumps are designed for pumping water and other thin, non-aggressive and non-explosive liquids, not containing solid particles or fibres.

The pumps are especially suited for use in small-scale agriculture and gardening.

The pumps can be permanently connected to the water mains or connected to a hose set.



Fig. 9 JPA pumps

TM06 5406 4515
TM06 5410 4515
TM06 5411 4515



Fig. 10 JPC pump

4.2 JPA PM, JPC PM, JPA PT, JPC PT

JPA PM and JPC PM are compact boosters consisting of a JPA pump and a Grundfos Pressure Manager (PM 1 version). To reduce the number of starts and stops, an external tank can be installed.

JPA PT and JPC PT are boosters consisting of a pump, a pressure switch, a pressure gauge and a diaphragm tank. The pressure switch automatically starts the pump according to demand. The diaphragm tank ensures a constant water pressure in the water supply.



Fig. 11 JPA PM and PT boosters

TM06 5408 4515
TM06 5409 4515
TM06 6703 2216



Fig. 12 JPC PM and JPC PT

TM05 8007 2216

4.3 JPD PT

JPD PT are self-priming centrifugal boosters for suction lifts up to 27 m. The pump body is made of cast iron. The high suction lift is achieved by means of an ejector which can be inserted into wells with a diameter of down to 10 cm (4"). The boosters are especially suited for use in small-scale agriculture and water supply to farmhouses.



Fig. 13 JPD boosters

TM06 5413 4515 - TM06 5415 4515

TM05 5091 3212

4.4 Identification

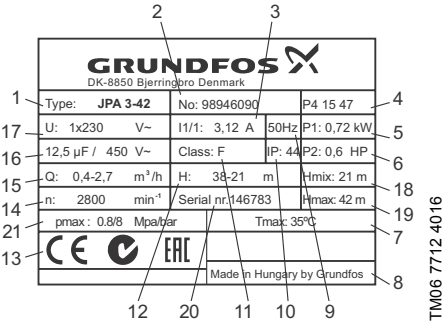


Fig. 14 Nameplate, JPA

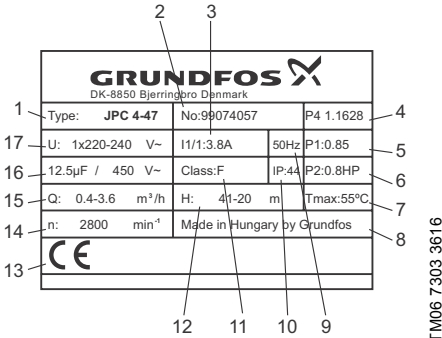


Fig. 15 Nameplate, JPC

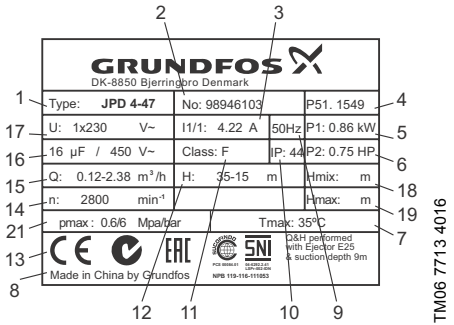


Fig. 16 Nameplate, JPD

Pos.	Description
1	Pump type
2	Product number
3	Full-load current
4	Factory and production date
5	Motor input power
6	Pump output power
7	Maximum temperature
8	Country of production
9	Frequency
10	Enclosure class
11	Motor insulation class
12	Head
13	Approvals
14	Speed
15	Maximum flow rate
16	Capacitor data
17	Supply voltage
18	Minimum head
19	Maximum head
20	Serial number
21	Maximum pressure

5. Servicing the product

5.1 Maintaining the product

In normal operation, the pump does not require any specific maintenance.

5.1.1 Safety instructions and requirements

DANGER

Electric shock



Death or serious personal injury

- If the power supply cable is damaged, it must be replaced by the manufacturer, his service agent or similarly qualified persons in order to avoid hazard.



Service must only be performed by trained service staff.

5.2 Spare parts and kits

Service kits are available for the JPA, JPC, JPD pumps and boosters.

The service kits consist of the following replaceable parts:

- shaft seal
- hydraulic parts
- capacitor.

6. Fault finding

DANGER

Electric shock



Death or serious personal injury

- Switch off the power supply before starting any work on the product. Make sure that the power supply cannot be accidentally switched on.

Fault	Cause	Remedy
1. The pump does not start.	a) Supply failure.	Cut in the circuit breaker or replace the fuses. If the new fuses also blow, check the electric installation.
	b) The pump is blocked by impurities.	Clean the pump. Check or replace the strainer in the inlet pipe.
	c) The motor is defective.	Replace the pump.
2. The pump runs, but gives no or just a little water.	a) The pump is not filled with water.	Prime the pump. See section 3. <i>Starting up the product</i> .
	b) The inlet pipe is blocked by impurities.	Clean the inlet pipe. Check or replace the strainer in the inlet pipe.
	c) The pump is blocked by impurities.	Clean the pump. Check or replace the strainer in the inlet pipe.
	d) The suction lift is too high. JPA, JPC: Maximum 7 m. JPD: Maximum 27 m.	Change the position of the pump.
	e) The inlet pipe is too long.	Change the position of the pump.
	f) The diameter of the inlet pipe is too small.	Replace the inlet pipe.
	g) The inlet pipe is not immersed deeply enough.	Make sure that the inlet pipe is immersed sufficiently.
3. The pump runs, but gives no water or delivers a reduced quantity of water at high pressure.	h) The inlet pipe is leaking.	Repair or replace the pipe.
	a) The outlet pipe is blocked.	Clean the pipe or open the isolating valves, if fitted. Check that no additional work is being carried out in the system.
4. The motor cuts out during operation.	a) The thermal switch in the motor has tripped due to overheating.	The thermal switch will cut in automatically when the motor has cooled sufficiently. If the problem persists, check these two possible causes: • The impeller is stuck. Clean the pump. • The motor is defective. Replace the pump.

7. Technical data

Maximum ambient temperature

35 or 55 °C. See the nameplate.

Liquid temperature

Domestic use: 0-35 °C or 0-60 °C. See the nameplate.

Other use: 0-40 °C.

Maximum operating pressure

6 bar, 600 kPa.

Maximum flow rate

Pump type	[m³/h]
JPA 3-42 / JPA 3-42 PT-H	3
JPA 4-47 / JPA 4-47 PT-H / JPA 4-47 PT-V	4
JPA 4-54 / JPA 4-54 PT-H / JPA 4-54 PT-V	4
JPA 5-61 / JPA 5-61 PT-V	5
JPA 8-62 / JPA 8-62 PT-V	8
JPA 12-41	12
JPA 12-51	12
JPC 3-42 / JPC 3-42 PT	3
JPC 4-47 / JPC 4-47 PT	4
JPC 4-54 / JPC 4-54 PT	4
JPC 5-48	5
JPD 4-47 PT	4
JPD 4-54 PT	4
JPD 5-61 PT	5
JPD 8-62 PT	8

Maximum head

Pump type	[m]
JPA 3-42 / JPA 3-42 PT-H	42
JPA 4-47 / JPA 4-47 PT-H / JPA 4-47 PT-V	47
JPA 4-54 / JPA 4-54 PT-H / JPA 4-54 PT-V	54
JPA 5-61 / JPA 5-61 PT-V	61
JPA 8-62 / JPA 8-62 PT-V	62
JPA 12-41	41
JPA 12-51	51
JPC 3-42 / JPC 3-42 PT	42
JPC 4-47 / JPC 4-47 PT	47
JPC 4-54 / JPC 4-54 PT	54
JPC 5-48	48
JPD 4-47 PT	47
JPD 4-54 PT	54
JPD 5-61 PT	61
JPD 8-62 PT	62

Maximum inlet pressure

Pump type	[bar]	[MPa]
JPA 3-42 / JPA 3-42 PT-H	3.8	0.38
JPA 4-47 / JPA 4-47 PT-H / JPA 4-47 PT-V	3.3	0.33
JPA 4-54 / JPA 4-54 PT-H / JPA 4-54 PT-V	2.6	0.26
JPA 5-61 / JPA 5-61 PT-V	1.9	0.19
JPA 8-62 / JPA 8-62 PT-V	1.8	0.18
JPA 12-41	3.9	0.39
JPA 12-51	2.9	0.29
JPC 3-42 / JPC 3-42 PT	1.8	0.18
JPC 4-47 / JPC 4-47 PT	1.3	0.13
JPC 4-54 / JPC 4-54 PT	0.6	0.06
JPC 5-48	1.2	0.12
JPD 4-47 PT	1.3	0.13
JPD 4-54 PT	0.6	0.06
JPD 5-61 PT	1.9	0.19
JPD 8-62 PT	1.8	0.18

Maximum suction lift

JPA, JPC: 8 m, including a pressure loss, at a liquid temperature of 20 °C.

JPD: 27 m.

Supply voltage

	JPA	JPC	JPD
1 x 115 V, 60 Hz	-	•	-
1 x 230 V, 60 Hz	-	•	-
1 x 230 V, 50 Hz	•	•	•

Insulation class

F.

Enclosure class

IP44.

Relative air humidity

Maximum 95 %.

Maximum sound pressure level

JPA, JPD: less than 77 dB(A).

JPC 3-42: 82.9 dB.

JPC 4-47: 84.8 dB.

JPC 4-54: 88.0 dB.

Frequency of starts and stops

Maximum 20 per hour.

8. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

See also end-of-life information on www.grundfos.com.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romanian@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Representative Office of Grundfos Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses Revised 15.01.2019

99022277 0119
ECM: 1252450

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and 'be think innovate' are registered trademarks owned by The Grundfos Group. All rights reserved.
© 2019 Grundfos Holding A/S, all rights reserved.

JP, JPC, JPA, JPD

Service kit instructions



English (GB) Service kit instructions

1. Name change jet pumps

JP

Name
JP 3-42
JP 4-47
JP 4-54
JP 5-48

JPC

Old name	New name
JPC 2	JPC 3-42
JPC 3	JPC 4-47
JPC 4	JPC 4-54


JPBasic

Old name	New name
JPBasic 2	JPA 3-42
JPBasic 3	JPA 4-47
JPBasic 4	JPA 4-54
JPBasic 5	JPA 5-61
JPBasic 7	JPA 8-62
JPBasic 9	JPA 12-41
JPBasic 10	JPA 12-51

JDBasic


Old name	New name
JDBasic 2	JPD 4-47
JDBasic 4	JPD 4-54
JDBasic 5	JPD 5-61
JDBasic 7	JPD 8-62

2. JP 3-42, 4-47, 4-54, 5-48

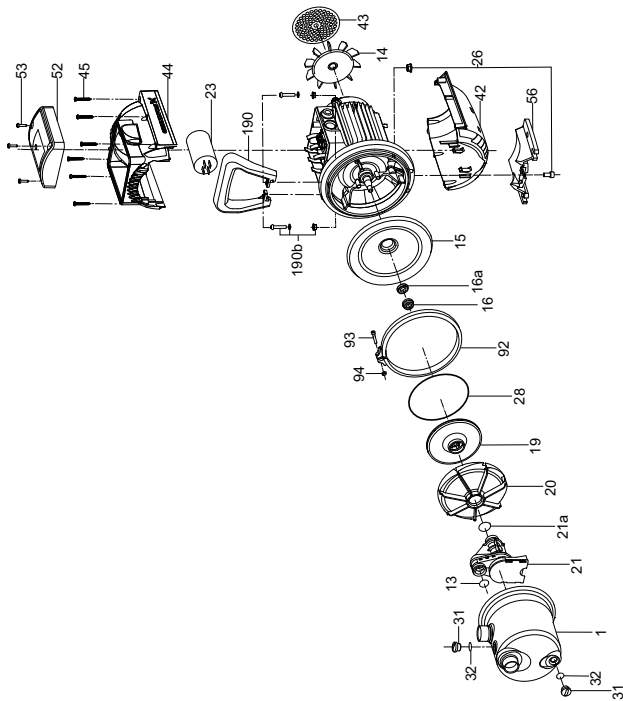


TM07 2748 0719

3. JPC 3-42, 4-47, 4-54

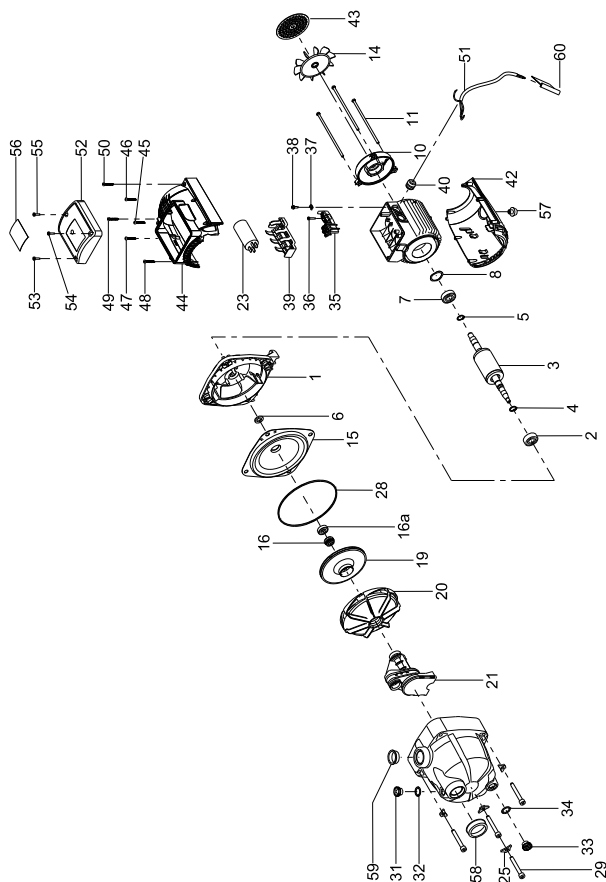


4. JPA 3-42, 4-47, 4-54

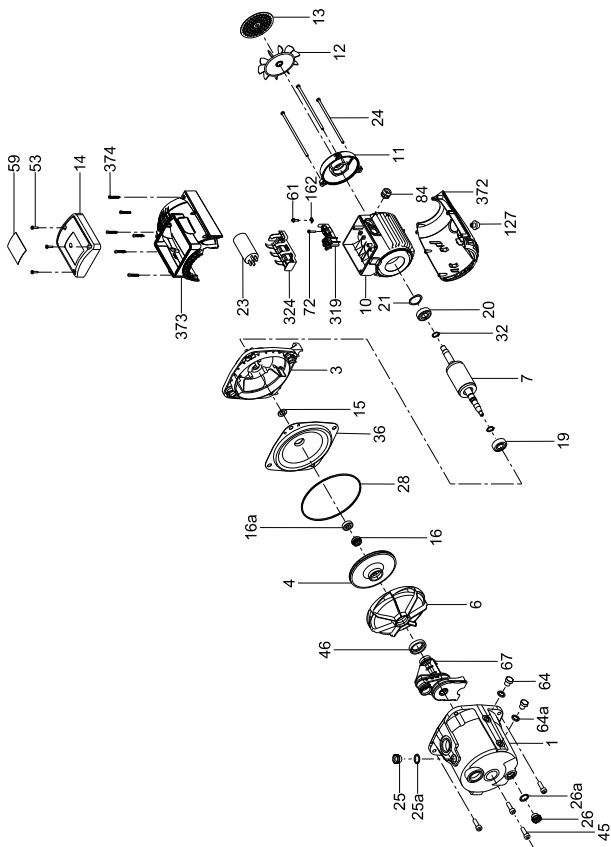


TM06 1887 3314

5. JPA 5-61, 8-62

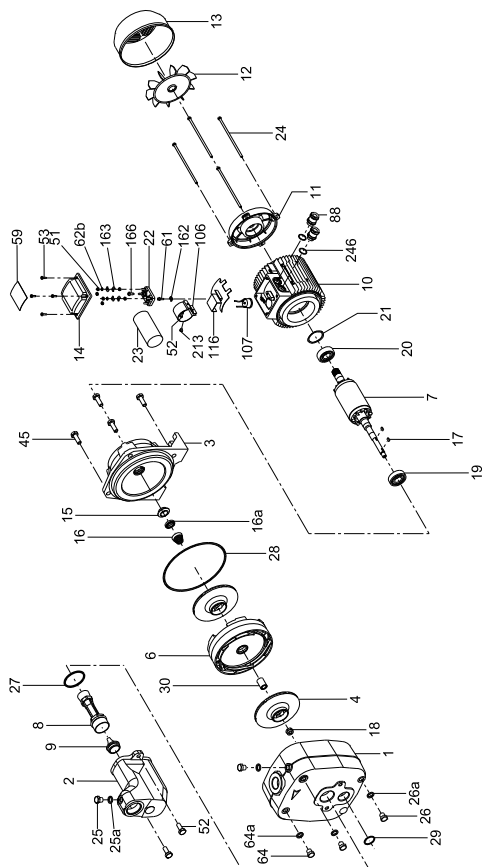


TM06 1886 3314

6. JPA 12-41, 12-51

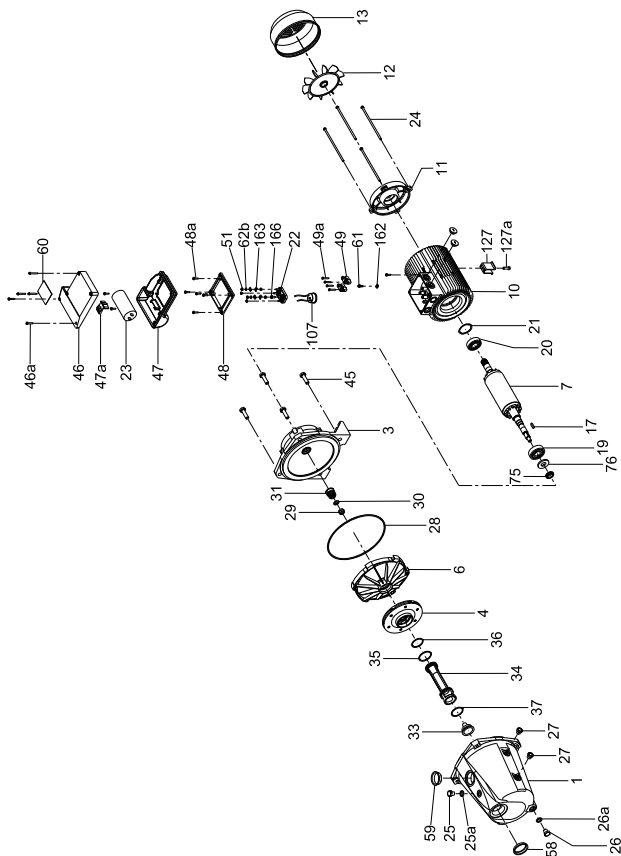


TM06 2120 3714

7. JPD 4-47, 4-54

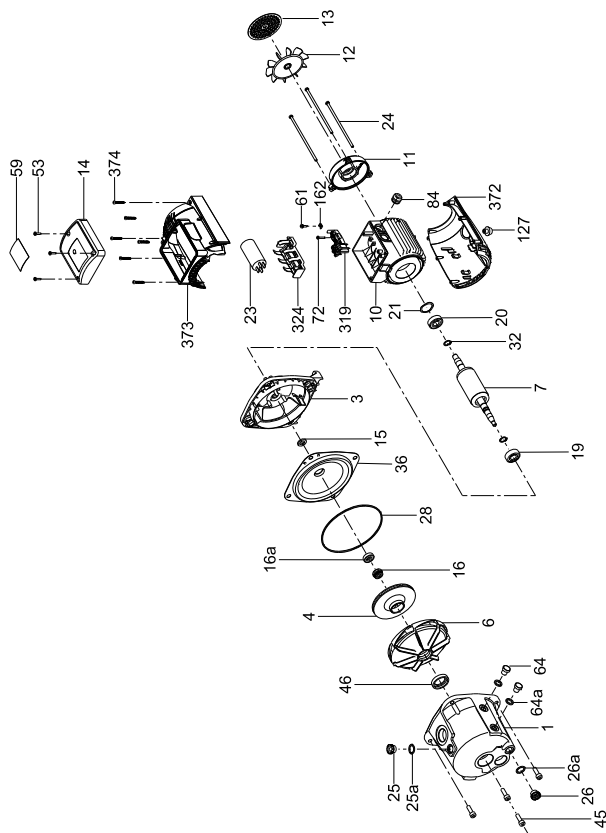

TM06 1593 2614

8. JPD 5-61, 8-62

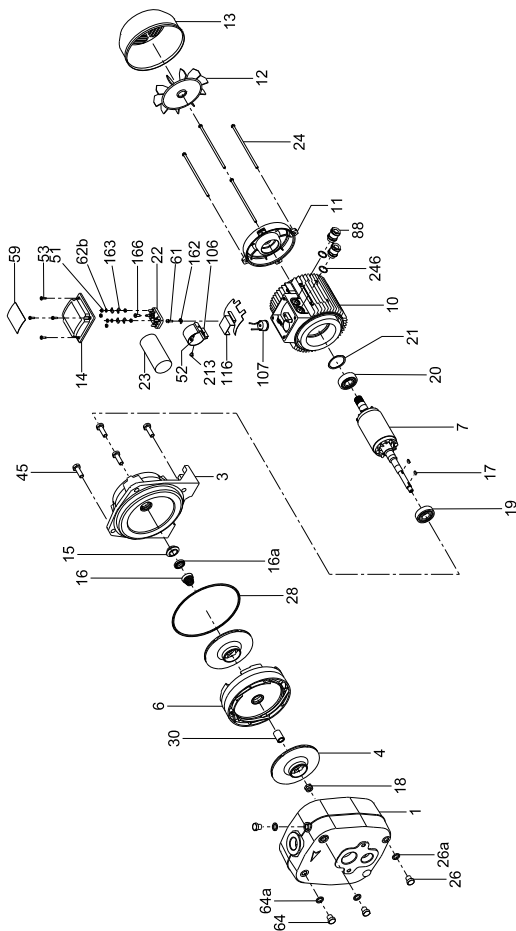

TM06 1594 2614

Argentina

Bombas GRUNDFOS de Argentina S.A.
Phone: +54-3327 414 444
Telefax: +54-3327 411 111

Australia

GRUNDFOS Pumps Pty. Ltd.
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство
ГРУНДФОС в Минске
Тел.: +7 (375 17) 286 39
72, 286 39 73
Факс: +7 (375-17) 286 39
71

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
email: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201

Canada

GRUNDFOS Canada Inc.
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
Phone: +86-021-612 252 22
Telefax: +86-021-612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Phone: +385 1 6595 400
Telefax: +385 1 6595 499

**GRUNDFOS Sales
Czechia and
Slovakia s.r.o.**

Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Tlf.: +45-87 50 50 50
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Phone: +358-(0)207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Tel.: +49-(0) 211 929 69-0
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendi-enst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Phone:
+852-27861706/27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
Phone: +91-44 4596 6800

Indonesia

PT GRUNDFOS Pompa
Phone: +62 21-469 51900
Telefax: +62-21-460 6910/460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Tel.: +39-02-95838112
Telefax:
+39-02-95309290/9583846 1

Japan

GRUNDFOS Pumps K.K.
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332 s

New Zealand

GRUNDFOS Pumps NZ Ltd.
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Phone: +40 21 200 4100
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
Тел. (+7) 495 737 30 00, 564 88 00
E-mail: grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Phone: +381 11 2258 740
Telefax: +381 11 2281 769

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Phona: +421 2 5020 1426

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19

South Africa

GRUNDFOS (PTY) LTD
Phone: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Tel.: +46(0)771-32 23 00
Telefax: +46(0)31-331 94 60

Switzerland

GRUNDFOS Pumpen AG
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Телефон: (+38 044) 237 04 00
Факс: (+38 044) 237 04 01

United Arab Emirates

GRUNDFOS Gulf Distribution
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Representative Office of Grundfos Kazakhstan in Uzbekistan
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses revised
21.01.2019

98679123 0219
ECM: 1254769